



Arthur 4216/E1 - 4222/E1 MkII - 5523/E1

Mono Power Amplifier

User Manual

**PLEASE READ BEFORE OPERATING THE UNIT**

## Thank you

Thank you for having chosen a power amplifier designed and built by boXem in Luxembourg, in the heart of Europe.

At boXem, our mission is to bring to your ears the music as the artists wanted it to be. Nothing is added, nothing is removed. This is achieved thanks to a careful selection of technologies, rigorous processes during development and manufacturing, and tireless attention to detail.

I wish you a lifetime of musical enjoyment with Arthur.

Fred Jacquot

Managing Partner at boXem sàrl

## History

Version	Date	Content	Autor
R1	06-Feb-25	First version	FJ

## Table of content

Important Safety Instructions .....	5
Connections & Controls.....	7
Rear .....	7
Front.....	7
Set-up .....	8
Installation.....	8
Connections.....	8
AC power input.....	8
Input connection .....	8
Output connection .....	8
Operation .....	9
Powering on and off .....	9
Front panel .....	9
Gain setting .....	9
Troubleshooting .....	10
Audio performance data .....	11
Arthur 4216/E1.....	11
Arthur 4222/E1 MkII.....	11
Arthur 5523/E1.....	11
Technical data .....	12

## Important Safety Instructions

---

**boXem suppose que le lecteur comprend parfaitement le texte en Anglais ci-dessous. En cas de doute veuillez contacter boXem. Une traduction vous sera envoyée sur demande.**

**boXem geht davon aus, dass der Leser den untenstehenden englischen Text vollständig versteht. Im Zweifelsfall wenden Sie sich bitte an boXem. Auf Anfrage wird Ihnen eine Übersetzung zugesandt.**

**boXem pressupõe que o leitor compreende plenamente o texto inglês abaixo. Em caso de dúvida, por favor contacte boXem. Uma tradução ser-lhe-á enviada a pedido.**

**boXem asume que el lector entiende perfectamente el texto en inglés que aparece a continuación. En caso de duda, póngase en contacto con boXem. Si lo solicita, se le enviará una traducción.**

---

Throughout this document, some aspects of operation that have a potential impact on safety or reliability are noted with the words "Warning" and "Caution". Take particular care reading and understanding these items. Paragraphs marked with "Warning" explain safety measures required to maintain your personal safety. Paragraphs marked with "Caution" pertain to danger to the equipment itself or to connected equipment. Please follow these precautions when using this product:

1. Read these instructions.
2. Keep these instructions.
3. Follow all instructions.
4. Heed all warnings.
5. Install in accordance with the manufacturer's instructions.
6. Use only attachments or accessories specified by the manufacturer.
7. **WARNING:** Dangerous voltage is inside this apparatus. Opening is only allowed by qualified service personnel.
8. **WARNING:** Do not defeat the safety purpose of the safety earth connection. Use a three-prong power cord to ensure the product is connected to safety earth. If your outlet doesn't allow safety earth connection, consult an electrician for replacement of the obsolete outlet.
9. **WARNING:** Connect only to an outlet whose voltage fits within the range indicated at the back of the power amplifier.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. **WARNING:** Do not use this apparatus near water. Do not expose the apparatus to dripping or splashing. Do not place objects filled with liquids (flower vases, drink cans, coffee cups, etc) on the apparatus. Do not use this apparatus out of doors.
13. **WARNING:** Clean only with a dry, soft, lint-free cloth. Do not spray any liquid cleaner onto the cabinet, as this may lead to dangerous shocks or malfunction.
14. **CAUTION:** This unit runs slightly warm when operated normally. Operate in a normally ventilated area.

15. CAUTION: Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Avoid exposure to direct sunlight.
16. Use only with a cart, stand, bracket, or table designed for use with electronic equipment. In any installation, make sure that injury or damage will not result from cables pulling on the apparatus and its mounting.
17. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
18. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.



THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAYBE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.




THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.




## Connections & Controls

### Rear

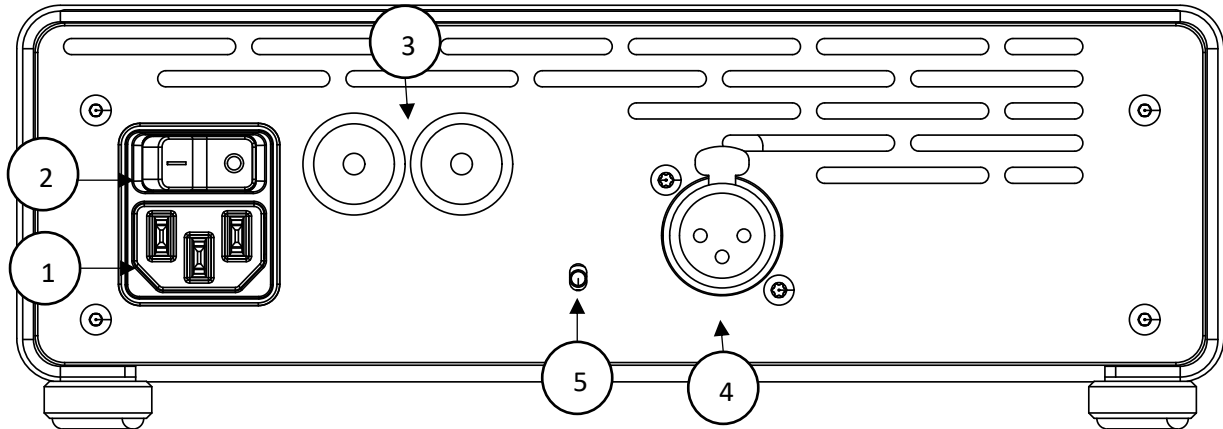

#	Function	Comment
1	Mains power input	IEC C14 socket – Matching IEC C13 plug
2	Mains power switch	
3	Output	3 ways binding post
4	Input – Audiosense	XLR female or RCA
5	Gain setting switch	High = high gain – Mid = low gain – Low = medium gain

### Front

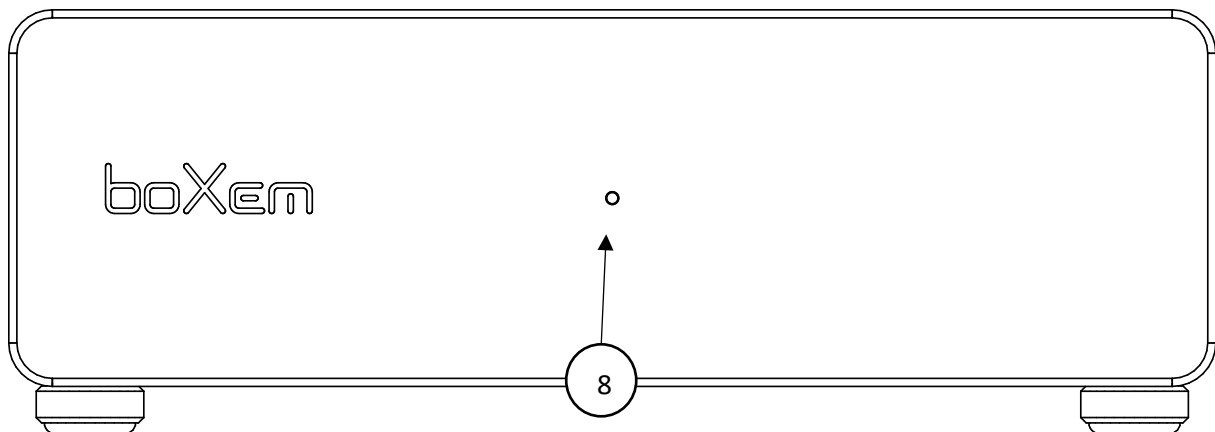

#	Function	Comment
8	Indicator LED	Off – Slow Blink – Fast Blink – On

## Set-up

### Installation

This product relies on free convection of air along the sides and top for cooling. Avoid placing magazines, books or other objects on top of the product as this acts as thermal insulation. Installation inside a cupboard is permissible provided at least 30cm (12") of free space above the product and 10cm (4") around the sides is respected. Operation in closer quarters requires some provision of forced convection (fan) to be installed inside the cupboard.

### Connections

---

**CAUTION: Whenever you are plugging or unplugging cables, make sure that the power amp is off. Failure to take this precaution may result in pops or bangs in the loudspeaker. Use properly shielded interconnects with reliable connectors.**

---

#### AC power input

Connect a power cord (not lighter than light PVC sheathed flexible cord according to IEC 60227-1 (designation 60227 IEC 52), 3G1mm<sup>2</sup>) with IEC C13 plug on amplifier side to the AC input socket (1) on the rear panel. Do not connect the power cord until all the audio input and output connections have been made.

It is usually best to plug the product directly into a wall outlet. Avoid the use of extension cords. A heavy-duty multi-tap power outlet strip may be used if it and the wall outlet are rated to handle the total current demanded by the components connected to it.

If you are going to be away from home for an extended period of time such as a month-long vacation, it is a sensible precaution to unplug electronic equipment. Do the same as a precautionary measure during thunderstorms. No amount of surge protection or mains filtering will save your equipment from a lightning strike in the backyard.

#### Input connection

The inputs (4) are of XLR or RCA type. In the case when your preamp/DAC would be equipped with both XLR and RCA connectors, we recommend using the XLR connection. Depending of the one chosen, set the toggle switch to the corresponding position.

#### Output connection

Connect the speaker negative input to the amplifier black binding.

Connect the speaker positive input to the amplifier black and red binding.



## Operation

### Powering on and off

The mains power switch (2) shall be used for powering the amplifier and completely switching it off. Using the mains power switch to switch off the amplifier after listening to music is not mandatory since the audiosense function will take care of it.

The audiosense function powers the main supply and the amplification stages as soon as a signal in the audio range frequencies is detected on input (4). When no such signal is detected during 10 minutes, the main supply and amplification stages are disconnected, allowing the amplifier to go in standby with ultra-low power consumption.

### Front panel

The indicator LED (8) has four modes:

- Off: the amplifier is unpowered or in standby
- Slow blinking: the amplification stage is in initialization phase
- On: the amplifier is ready to play music
- Fast blinking: the output stage is overloaded (clipping)

### Gain setting

The purpose of the gain setting is to adapt the sensitivity of the amplifier to the preamp or DAC connected.

The theoretical way of setting the gain of the amplifier is to choose the highest sensitivity below the maximum output of the preamp or DAC.

We propose another method, more pragmatic and providing good results:

1. Set the gain switch to low
2. Play not too compressed music
3. Raise the volume of the preamp/DAC until you reach -3 dB or the volume is too loud for your taste
4. If the loudness made you stop increasing the volume, you are done
5. Otherwise, lower the volume and set the gain switch to medium
6. Repeat operations 2 and 3
7. If the loudness made you stop increasing the volume, you are done
8. Otherwise, lower the volume and set the gain switch to high

Another advantage of this method is that the gain of the amplifier will be the lowest possible, ensuring a better protection for your speakers in case of false manipulation.

## Troubleshooting

Most difficulties in audio systems are the result of incorrect connections, or improper control settings. If you encounter problems, isolate the area of the difficulty, check the control settings, determine the cause of the fault and make the necessary changes. If you are unable to get sound from your amplifier or its behavior is not as expected, refer to the suggestions for the following conditions:

**No response to the mains switch:** Verify the mains connection. Unplug the power cable from the Kaluga and try to power another device with it. If this works, please contact us. The unit may need repair.

**The unit responds (as witnessed by lights and clicking relays) but no sound:** Verify correct speaker wiring.

**Quiet, distorted sound with interruptions:** You probably have a short across the speaker or amplifier terminals, for instance two uninsulated spade terminals touching. Reinstall your speaker cable.

**The indicator LED blinks slowly and never goes to permanently on:** Switch off the amplifier with the mains power switch. Wait 10 minutes. Switch on the amplifier with the mains power switch. If the problem still appears, please contact us. The unit may need repair.

**The indicator LED sometimes blinks quickly when playing music:** the amplifier is clipping, lower the volume to protect your speakers.

## Audio performance data

### Arthur 4216/E1

Item	Typical value	Unit	Comment
Maximum power	210	W	In 8 $\Omega$ - measured with 230V mains
THD+N	< 0.001	%	1 – 100W 20 – 20000Hz
SNR	TBD	dB	Low – medium – high gain
Residual noise	TBD	$\mu$ V	Low – medium – high gain
Frequency response	0 – 80	kHz	0 – -3 dB
Gain	12.3 – 20.3 – 26.3	dB	Low – medium – high gain
Minimal load	< 2	$\Omega$	
Input sensitivity	10 – 4 – 2	V RMS	In 8 $\Omega$ - measured with 230V mains

### Arthur 4222/E1 MkII

Item	Typical value	Unit	Comment
Maximum power	210	W	In 8 $\Omega$ - measured with 230V mains
THD+N	< 0.001	%	1 – 100W 20 – 20000Hz
SNR	126 – 126 – 124	dB	Low – medium – high gain
Residual noise	16 – 16 – 19	$\mu$ V	Low – medium – high gain
Frequency response	0 – 60	kHz	0 – -3 dB
Gain	13 – 21 – 27	dB	Low – medium – high gain
Minimal load	< 1	$\Omega$	
Input sensitivity	9.2 – 3.7 – 1.8	V RMS	In 8 $\Omega$ - measured with 230V mains

### Arthur 5523/E1

Item	Typical value	Unit	Comment
Maximum power	380	W	In 8 $\Omega$ - measured with 230V mains
THD+N	< 0.001	%	1 – 100W 20 – 20000Hz
SNR	TBD	dB	Low – medium – high gain
Residual noise	TBD	$\mu$ V	Low – medium – high gain
Frequency response	0 – 80	kHz	0 – -3 dB
Gain	14.4 – 22.4 – 28.4	dB	Low – medium – high gain
Minimal load	< 1	$\Omega$	
Input sensitivity	10.5 – 4.2 – 2.1	V RMS	In 8 $\Omega$ - measured with 230V mains

## Technical data

Item	Value	Comment
Supply voltage 1	180 – 264 VAC 47 – 60 Hz	Pending market
Supply voltage 2	90 – 132 VAC 47 – 60 Hz	Pending market
Operating ambient temperature	0 – 29 °C	
Power consumption	1350 – 12.5 – <0.5 W	Maximum – idling - standby
Dimensions	224 x 80 x 318 mm	W x H x D
Weight	4.5 kg	

End of document